

Benennung	Bestell-Nr.	Stück	Benennung	Bestell-Nr.	Stück
Schraubhandgriff	P26SDS-1	1	Kolben	P26SDS-59	1
Klemmring, komplett	P26SDS-1K	0	Kolben, komplett	P26SDS-59k	0
Einlegemutter M10	P26SDS-2	1	Pleuel	P26SDS-60	1
Klemmring	P26SDS-3	1	Kurbel	P26SDS-61	1
Kreuzgriffschraube M5	P26SDS-4	1	Rillenkugellager	P26SDS-62	1
Sechskantmutter M5	P26SDS-5	1	Kurbelrad	P26SDS-63	1
Anschlagstange	P26SDS-6	1	Axialscheibe	P26SDS-64	1
Tülle	P26SDS-7	1	Linsenkopfschraube 4x48	P26SDS-65	2
Zylinderschraube M5x20, beschichtet	P26SDS-15	4	Luftleitflansch	P26SDS-66	1
Bohrkopfdichtung	P26SDS-17	1	Feldpaket, 230V	P26SDS-67	1
Doppelabstreifer	P26SDS-18	1	Linsenschraube 3,5x30	P26SDS-69	2
Nadellager	P26SDS-19	1	Umschalthebel	P26SDS-70	1
Ring	P26SDS-20	1	Linsensenkschraube M4x10	P26SDS-71	1
O-Ring 9x3	P26SDS-21	4	Linsenkopfschraube 3x10	P26SDS-73	4
O-Ring 24x4	P26SDS-23	1	Kohlebürste	P26SDS-74	2
Quadring	P26SDS-24	1	Kohlehalter	P26SDS-75	2
Bohrspindel	P26SDS-25	1	Motordeckel	P26SDS-76	1
Haltestift	P26SDS-26	1	Nadelhülse	P26SDS-78	1
Nadelrolle 3x11,8	P26SDS-27	4	Senkschraube M5x8	P26SDS-79	1
Kupplungsfeder	P26SDS-28	1	Rastenfeder	P26SDS-80	1
Anlaufscheibe	P26SDS-29	2	Kugel Ø4mm	P26SDS-81	1
Sprengring	P26SDS-30	1	Zylindergehäuse	P26SDS-82	1
Sicherungsring	P26SDS-31	1	Flachsenkopfschraube 4x27	P26SDS-83	6
Dämpfscheibe	P26SDS-32	3	Schaltwelle	P26SDS-84	1
O-Ring 35x5	P26SDS-33	1	O-Ring 12x1,5	P26SDS-85	1
Dämpfring	P26SDS-34	1	Zylindergehäusedichtung	P26SDS-86	1
Sprengring	P26SDS-35	2	Kondensator	P26SDS-87	1
Runddrahtsprengring	P26SDS-36	1	Dämpfer-Zylindergehäuse	P26SDS-88	1
Zylinder	P26SDS-37	1	Schalter	P26SDS-89	1
Linsenschraube 3,5x20	P26SDS-39	4	Schalterschutz	P26SDS-90	1
Kegelritzelrad	P26SDS-40	1	Dämpfer-Motorgehäuse	P26SDS-91	1
Rillenkugellager	P26SDS-41	1	Schalterhandgriff	P26SDS-92	1
Zylinderlager	P26SDS-42	2	Linsenschraube 5x30	P26SDS-93	4
Getriebeplatte	P26SDS-43	1	Linsenkopfschraube 4x20	P26SDS-94	2
Kupferdichtring M5	P26SDS-44	6	Abstandsbuchse	P26SDS-95	4
Zylinderschraube M5x16	P26SDS-45	6	Linsenkopfschraube 4x14	P26SDS-96	6
V-Ring	P26SDS-46	1	Kabelklemme	P26SDS-97	1
O-Ring 18x2	P26SDS-47	1	Kabelschutzhülle	P26SDS-98	1
V-Ringscheibe	P26SDS-48	1	Kabel mit Stecker	P26SDS-99	1
Rillenkugellager	P26SDS-49	1	Lagergummi	P26SDS-100	1
Sicherungsring	P26SDS-50	1	Manschette	P26SDS-201	1
Anker, 230V	P26SDS-51	1	Futterhülse	P26SDS-202	1
Rillenkugellager	P26SDS-52	1	Sprengring RW18	P26SDS-203	2
Lagergummi	P26SDS-53	1	Haltering	P26SDS-204	1
O-Ring 16x5	P26SDS-54	1	Futterring	P26SDS-205	1
Schläger	P26SDS-55	1	Anschlagring	P26SDS-206	1
Kolbenring	P26SDS-56	1	Feder	P26SDS-207	1
Kolbenring	P26SDS-56p	1	Schaltfeder	P26SDS-208	1
Kolbenbolzen	P26SDS-57	1	Hülse	P26SDS-209	1
Federring	P26SDS-58	2	Kugel Ø7mm	P26SDS-210	2

# Ersatzteilliste

## Bohrhammer P 26 SDS

# DUSS

Benennung	Bestell-Nr.	Stück
Futter	P26SDS-211	1
Futter, komplett	P26SDS-211K	0
Döpper	P26SDS-212	1
Typenschild P26SDS	P26SDS-213	1
DUSS-Aufkleber P26SDS	P26SDS-214	2

Benennung	Bestell-Nr.	Stück
Bohrkopf	P26SDS-215	1
Oberschale	P26SDS-216	1
Motorgehäuse	P26SDS-217	1

# DUSS

P 26 SDS

