

Spare part list

DIA 100 W diamond core drill

DUSS

Description	Order-No.	Quantity
Side handle	DIA100W-1	1
Clamping collar with jaw	DIA100W-2	1
Nut M12	DIA100W-3	1
Front cover	DIA100W-4	1
Cheese head screw M6x20	DIA100W-5	4
Copper washer M6	DIA100W-6	4
Gasket	DIA100W-7	1
Dust seal	DIA100W-8	1
Roller bearing	DIA100W-9	1
Ball bearing	DIA100W-10	1
Cylinder housing	DIA100W-11	1
Metering cone, assembled	DIA100W-12	1
O-ring seal 10x3,5	DIA100W-13	1
Copper washer M5	DIA100W-14	7
Cheese head screw M5x8	DIA100W-15	1
Screw joint	DIA100W-16	1
Case flange	DIA100W-17	1
Sealing ring	DIA100W-18	1
Hexagon nut M16x1,5	DIA100W-19	1
O-ring seal 7x2,5	DIA100W-20	3
Cheese head screw M5x20	DIA100W-21	6
Gasket	DIA100W-22	1
Pressing tube	DIA100W-23	1
Lens head screw M3,5x4	DIA100W-24	1
Countersunk head screw M4x10	DIA100W-25	1
O-ring seal 12x2	DIA100W-26	1
Threaded nipple	DIA100W-27	1
Water hose	DIA100W-28	1
Washer	DIA100W-29	3
Needle thrust bearing	DIA100W-30	1
Outer clutch spring	DIA100W-31	1
Inner clutch spring	DIA100W-32	1
Bevel gear	DIA100W-33	1
Tool bit driver	DIA100W-35	1
Roller 4x11,8	DIA100W-36	14
Roller 4x19,8	DIA100W-37	10
Space hull	DIA100W-38	1
Tube	DIA100W-39	1
Connecting fitting	DIA100W-43k	1
Lens head screw 4x48	DIA100W-44	2
Field, 230V	DIA100W-45	1
Insulating housing	DIA100W-46	1
Motor cover	DIA100W-47	1
Lens head screw M4x20	DIA100W-48	4
Electronics ass'y	DIA100W-49	1
V-ring seal	DIA100W-50	1
O-ring seal 26x2	DIA100W-51	1
Plain washer	DIA100W-52	1
Ball bearing	DIA100W-53	1
Retaining ring	DIA100W-54	1

Description	Order-No.	Quantity
Washer	DIA100W-55	1
Armature, 230V	DIA100W-56	1
Ball bearing	DIA100W-57	1
Rubber sleeve	DIA100W-58	1
Bevel gear pinion	DIA100W-59	1
Gear wheel	DIA100W-60	1
Ball bearing	DIA100W-61	1
Ball bearing	DIA100W-62	1
Sleeve bearing	DIA100W-63	1
Needle bush	DIA100W-64	1
Washer	DIA100W-65	2
Layshaft gear	DIA100W-66	1
Pinion	DIA100W-67	1
Ball bearing	DIA100W-68	1
Grooved pin	DIA100W-69	4
DIA100W nameplate	DIA100W-70	1
DUSS DIA100W sticker	DIA100W-71	2
Carbon brush	DIA100W-73	2
Brush holder	DIA100W-74	2
Lens head screw 3x10	DIA100W-75	4
Side handle	DIA100W-76	1
Handle plate	DIA100W-77	1
Damper cylinder housing	DIA100W-78	2
Switch	DIA100W-79	1
Damper motor housing	DIA100W-80	2
Capacitor	DIA100W-81	1
Choke coil	DIA100W-82	1
Spring	DIA100W-83	1
Potentiometer	DIA100W-84	1
Spacer	DIA100W-85	4
Cheese head screw M5x40	DIA100W-86	2
Switch handle	DIA100W-87	1
Lens head screw 4x20	DIA100W-88	2
Cheese head screw M5x30	DIA100W-89	2
Lens head screw 4x14	DIA100W-90	4
Cord sleeve dia. 10mm	DIA100W-93	1
Cord clamp	DIA100W-94	1
Cord, plug and PRCD	DIA100W-95k	1
Cord for PRCD	DIA100W-95a	0
PRCD circuit breaker	DIA100W-95b	0
Cord, plug without PRCD	DIA100W-95c	0
Protective tube	DIA100W-96	1
Hose clamp	DIA100W-97	2
PVC fabric braided hose	DIA100W-98	1
Plastic tube	DIA100W-99	1
Reducer 3/4"	DIA100W-100	1
Hose coupling 3/4"	DIA100W-101	1
Centring rod	DIA100W-102	1
Lustre terminal	DIA100W-103	1
O-ring seal 14x4	DIA100W-104	1

Spare part list

DIA 100 W diamond core drill



Description	Order-No.	Quantity
Ball bearing	DIA100W-300	1
Motor housing	DIA100W-301	1
Ventilation insert, right	DIA100W-302	1
Ventilation insert, left	DIA100W-303	1
Ball valve, assembled	DIA100W-304k	1
Ball valve lever, assembled	DIA100W-305k	0

Description	Order-No.	Quantity
Retaining ring	DIA100W-306	0
Washer M7	DIA100W-307	1
Fixing bracket	DIA100W-308	1

DUSS

DIA 100 W

