

Spare part list

P 60 A combi hammer

DUSS

Description	Order-No.	Quantity	Description	Order-No.	Quantity
Tool retainer	P60A-1	1	Clutch spring	P60A-50	1
Tool retainer with shock absorber	P60A-1+3	0	Support washer	P60A-51	1
Bolt	P60A-2	1	Damper	P60A-52	1
Shock absorber	P60A-3	2	Friction sleeve	P60A-53	1
Washer M6	P60A-4	1	Axial damper	P60A-54	1
Splint	P60A-5	1	Safety clutch	P60A-55	1
Clamping collar with jaw	P60A-6	1	Needle bush	P60A-56	1
Clamping collar, assembled	P60A-6K	0	Crank shaft	P60A-57	1
Nut M12	P60A-7	1	Ball bearing	P60A-58	1
Front cover	P60A-9	1	Gear wheel	P60A-59	1
Gasket	P60A-11	1	Gasket	P60A-60	1
Dust seal	P60A-12	1	Grooved pin	P60A-63	4
Sleeve bearing	P60A-13	1	Sleeve bearing	P60A-64	2
Clutch dog	P60A-14	1	Ball bearing	P60A-65	1
Damper ring	P60A-15	1	Ball bearing	P60A-67	1
Tool bit driver	P60A-16	1	O-ring seal 26x2	P60A-68	1
Ram	P60A-17	1	Plain washer	P60A-69	1
Seal	P60A-18	1	Ball bearing	P60A-70	1
Seal	P60A-19	2	Retaining ring	P60A-71	1
Ram guide	P60A-20	1	Washer	P60A-72	1
Cheese head screw M6x90	P60A-21	4	Armature, 230V	P60A-73	1
Copper washer M6	P60A-22A	4	Ball bearing	P60A-74	1
Shaft	P60A-24	1	V-ring seal	P60A-75	1
Spring	P60A-25	1	Pinion	P60A-76	1
Ball dia. 3,5mm	P60A-26	1	Layshaft gear	P60A-77	1
O-ring seal 20x1	P60A-27	1	Gear wheel	P60A-78	1
Flange	P60A-28	1	Bevel gear pinion	P60A-79	1
O-ring seal 13x1,5	P60A-29	1	Copper washer M5	P60A-80	6
Change lever	P60A-30	1	Cheese head screw M5x20	P60A-81	6
Change lever, assembled	P60A-30K	0	Lens head screw 4x48	P60A-84	2
Lock washer M4	P60A-31	2	Insulating housing	P60A-85	1
Cheese head screw M4x12	P60A-32	2	Rubber sleeve	P60A-86	1
Serrated washer	P60A-33	2	Brush holder	P60A-87	2
Raised countersunk screw M4x10	P60A-34	2	Lens head screw 3x10	P60A-89	4
Cylinder housing	P60A-35	1	Motor cover	P60A-91	1
Needle bush	P60A-36	1	Lens head screw M4x20	P60A-92	4
Connecting rod	P60A-38	1	Potentiometer	P60A-100	1
Piston	P60A-39	1	Cord clamp	P60A-101	1
Piston, assembled	P60A-39k	0	Lens head screw 4x14	P60A-102	2
Piston pin	P60A-40	1	Cord sleeve	P60A-103	1
Spring lock washer	P60A-41	2	Cord and plug	P60A-104	1
Piston ring	P60A-42	2	Lens head screw 4x20	P60A-105	2
Striker	P60A-43	1	Spring	P60A-107	1
Cylinder	P60A-44	1	Side handle	P60A-200	1
Sleeve bearing	P60A-45	1	O-ring seal 14x4	P60A-201	1
O-ring seal 49x3,5	P60A-45A	1	Switch	P60A-202	1
Damper washer	P60A-46	1	Field, 230V	P60A-203	1
Retaining ring	P60A-47	1	Electronics ass'y	P60A-204	1
Roller 3x11,8	P60A-48	4	Carbon brush	P60A-205	1
Pin	P60A-49	1	Carbon brush with wire strand	P60A-206	1

Spare part list

P 60 A combi hammer


DUSS

Description	Order-No.	Quantity
P60A nameplate	P60A-207	1
DUSS P60A sticker	P60A-208	2
Motor housing	P60A-209	1
Ventilation insert, right	P60A-210	1
Ventilation insert, left	P60A-211	1
Sticker RVA	P60A-212	1
Fitting for the diodes	P60A-213	1
Washer M5	P60A-214	4
Cheese head screw M5x60	P60A-215	2
Cheese head screw M5x65	P60A-216	2
Nut M12	P60A-217	1
O-ring seal 8x3	P60A-218	1
Side handle	P60A-219	1
Switch handle	P60A-220	1
Pressure spring	P60A-221	2
Lower vibration abs. housing (cyl.)	P60A-222	1
Vibration abs.housing (cyl.), ass'y	P60A-222k	0
Spacer	P60A-223	0
Pressure spring	P60A-224	0

Description	Order-No.	Quantity
Pressure spring	P60A-225	8
Antivibration mass	P60A-226	1
Space hull	P60A-227	0
Spring plate	P60A-228	1
Disk spring	P60A-229	1
Screw 4x27	P60A-230	1
Washer	P60A-231	2
Upper vibration abs. housing (cyl.)	P60A-232	1
Lower vibration abs. housing (mot.)	P60A-233	1
Vibration abs.housing (mot.), ass'y	P60A-233k	0
Spacer	P60A-234	2
Pressure spring	P60A-235	2
Upper vibration abs.housing (mot.)	P60A-236	1
Disk spring	P60A-237	1
Countersunk head screw 4x12	P60A-238	1
Spacer with guidance	P60A-239	2
Pressure spring	P60A-240	2

DUSS

P 60 A

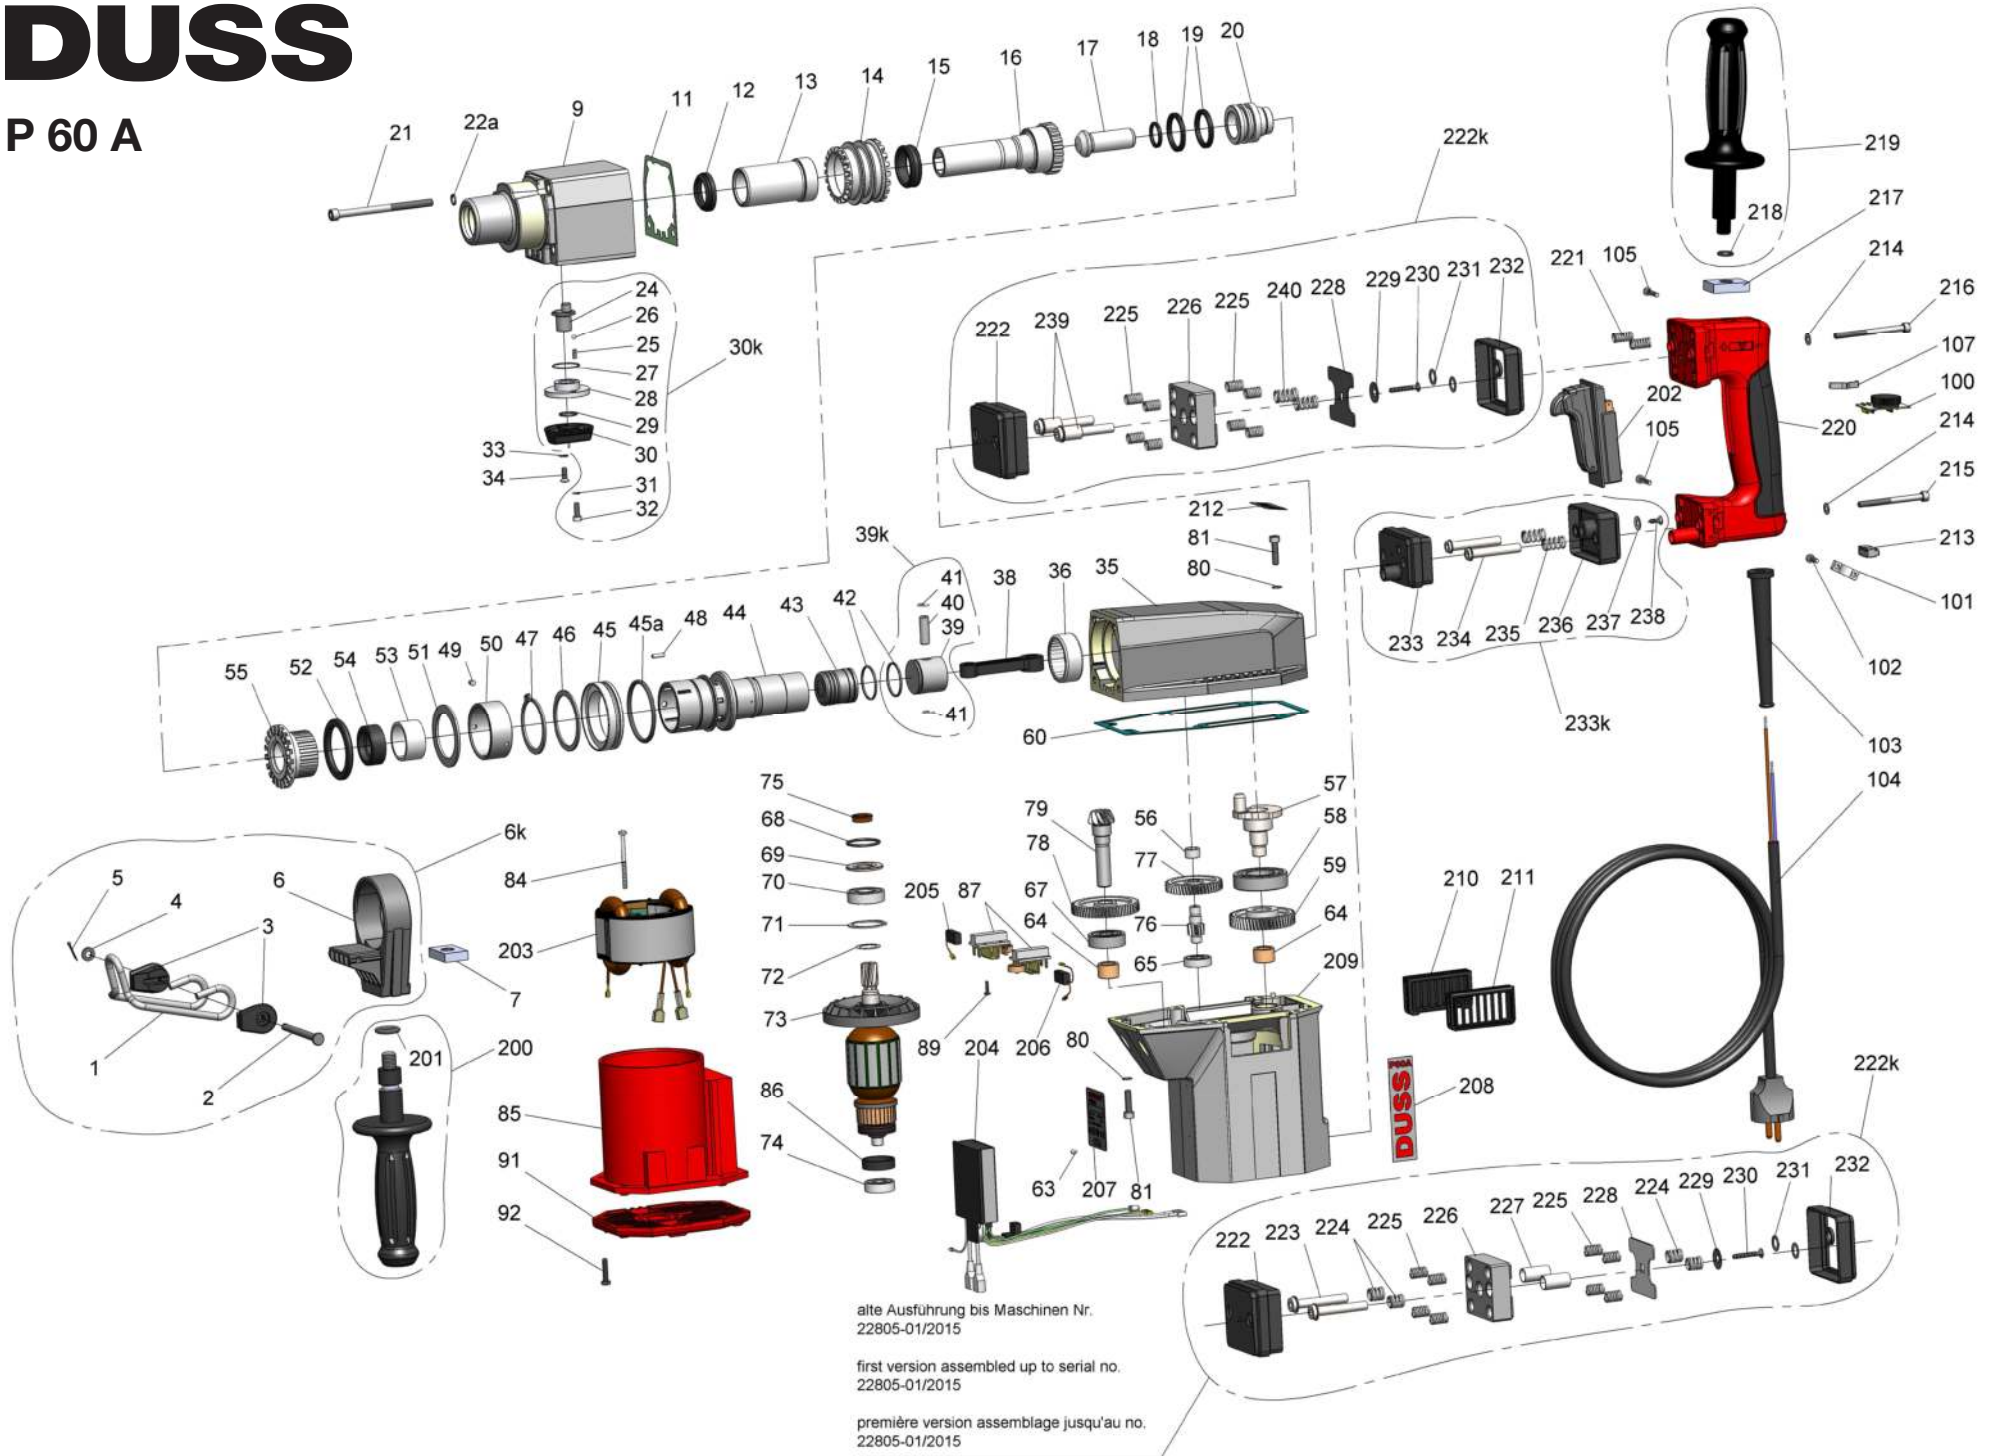

alte Ausführung bis Maschinen Nr.
22805-01/2015

first version assembled up to serial no.
22805-01/2015

première version assemblage jusqu'au no.
22805-01/2015