

Spare part list

PK 75 A breaker

DUSS

Description	Order-No.	Quantity
Splint	PK75A-1	1
Washer M6	PK75A-2	1
Shock absorber	PK75A-3	2
Tool retainer	PK75A-4	1
Tool retainer with shock absorber	PK75A-4+3	0
Bolt	PK75A-5	1
Clamping collar with jaw	PK75A-6	1
Clamping collar, assembled	PK75A-6K	0
Countersunk head screw 4x12	PK75A-7	3
Nut M10	PK75A-8	1
Dust guard	PK75A-10	1
Retaining ring	PK75A-11	1
Sleeve	PK75A-12	1
Cheese head screw M6x20	PK75A-14	4
Front cover	PK75A-15	1
O-ring seal 30x7	PK75A-16	2
Tool bit holder	PK75A-17	0
Seal	PK75A-18	1
Ram guide	PK75A-19	1
Sealing ring	PK75A-20	1
Retaining ring	PK75A-21	1
Ram	PK75A-22	1
Retainer	PK75A-23	1
Friction sleeve	PK75A-24	1
O-ring seal 35x3	PK75A-25	1
Cylinder	PK75A-26	1
Support washer	PK75A-27	1
Damper	PK75A-28	3
Striker	PK75A-29	1
Striker ring	PK75A-30	1
Piston ring	PK75A-31	1
Piston, assembled	PK75A-32k	0
Piston	PK75A-32	1
Piston pin	PK75A-33	1
Spring lock washer	PK75A-34	2
Connecting rod	PK75A-35	1
Sleeve bearing	PK75A-36	1
Gasket	PK75A-37	1
Cylinder housing	PK75A-38	1
Cheese head screw M5x20	PK75A-39	6
Copper washer M5	PK75A-40	6
Gasket	PK75A-41	1
Lens head screw 4x48	PK75A-42	2
Field, 230V	PK75A-43	1
Insulating housing	PK75A-44	1
Brush holder	PK75A-45	2
Lens head screw 3x10	PK75A-47	4
Lens head screw M4x20	PK75A-48	4
Motor cover	PK75A-49	1
V-ring seal	PK75A-51	1

Description	Order-No.	Quantity
O-ring seal 26x2	PK75A-52	1
Plain washer	PK75A-53	1
Ball bearing	PK75A-54	1
Retaining ring	PK75A-55	1
Washer	PK75A-56	1
Armature, 230V	PK75A-57	1
Ball bearing	PK75A-58	1
Rubber sleeve	PK75A-59	1
Crank shaft	PK75A-60	1
Ball bearing	PK75A-61	1
Gear wheel	PK75A-62	1
Sleeve bearing	PK75A-63	1
Grooved pin	PK75A-65	4
Spring	PK75A-70	1
Potentiometer	PK75A-71	1
Lens head screw 4x20	PK75A-77	3
Lens head screw 4x14	PK75A-78	2
Cord clamp	PK75A-79	1
Cord sleeve	PK75A-80	1
Cord and plug	PK75A-82	1
Motor housing	PK75A-200	1
PK75A nameplate	PK75A-201	1
Carbon brush	PK75A-202	1
Carbon brush with wire strand	PK75A-203	1
Electronics ass'y	PK75A-204	1
DUSS PK75A sticker	PK75A-205	2
Ventilation insert, right	PK75A-206	1
Ventilation insert, left	PK75A-207	1
Lower vibration abs. housing (cyl.)	PK75A-208	1
Spacer	PK75A-209	0
Pressure spring	PK75A-210	8
Antivibration mass	PK75A-211	1
Pressure spring	PK75A-212	2
Space hull	PK75A-213	2
Spring plate	PK75A-214	1
Disk spring	PK75A-215	1
Washer	PK75A-216	2
Screw 4x27	PK75A-217	1
Upper vibration abs. housing (cyl.)	PK75A-218	1
Vibration abs.housing (cyl.), ass'y	PK75A-218k	0
Pressure spring	PK75A-219	2
Switch handle	PK75A-220	1
Washer M5	PK75A-221	4
Cheese head screw M5x65	PK75A-222	2
Switch	PK75A-223	1
Lower vibration abs. housing (mot.)	PK75A-224	1
Spacer	PK75A-225	2
Pressure spring	PK75A-226	2
Upper vibration abs.housing (mot.)	PK75A-227	1
Vibration abs.housing (mot.), ass'y	PK75A-227k	0

Spare part list

PK 75 A breaker

DUSS

Description	Order-No.	Quantity
Disk spring	PK75A-228	1
Fitting for the diodes	PK75A-229	1
Cheese head screw M5x60	PK75A-230	2
Side handle	PK75A-231	1
Nut M12	PK75A-232	1
Side handle	PK75A-233	1
Insulating sleeve	PK75A-234	1

Description	Order-No.	Quantity
Sticker RVA	PK75A-235	1
O-ring seal 8x3	PK75A-236	1
O-ring seal 14x4	PK75A-237	1
Spacer with guidance	PK75A-238	2
Pressure spring	PK75A-239	2

DUSS

PK 75 A

