

Spare part list

PKX 4 A breaker



Description	Order-No.	Quantity
Dust guard	PKX4A-4	1
Circlip	PKX4A-5	1
Locking sleeve	PKX4A-6	1
Retaining ring	PKX4A-7	1
Steel sleeve	PKX4A-8	1
Spring	PKX4A-9	1
Washer	PKX4A-10	1
Aluminium sleeve	PKX4A-11	0
Cheese head screw M5x65	PKX4A-12	4
Cheese head screw M5x25	PKX4A-13	2
Copper washer M5	PKX4A-14	10
Gasket	PKX4A-16	1
O-ring seal 26x5	PKX4A-19	2
Damper washer	PKX4A-20	3
Roller	PKX4A-22	2
Washer	PKX4A-33	2
Piston pin	PKX4A-41	1
Spring lock washer	PKX4A-43	2
Connecting rod	PKX4A-44	1
Cylinder housing	PKX4A-46	1
Upper cover	PKX4A-47	1
Lens head screw 3,5x20	PKX4A-48	6
Screw 4x27	PKX4A-49	7
Gasket	PKX4A-50	1
Shaft	PKX4A-51	1
O-ring seal 20x1	PKX4A-52	1
Ball dia. 3,5mm	PKX4A-53	1
Spring	PKX4A-54	1
Flange	PKX4A-55	1
O-ring seal 13x1,5	PKX4A-56	1
Serrated washer	PKX4A-58	2
Raised countersunk screw M4x10	PKX4A-59	2
Lock washer M4	PKX4A-60	2
Cheese head screw M4x12	PKX4A-61	2
Sleeve bearing	PKX4A-65	1
Gear plate	PKX4A-66	1
Cheese head screw M5x16	PKX4A-67	6
V-ring seal	PKX4A-68	1
O-ring seal 18x2	PKX4A-69	1
Plain washer	PKX4A-70	1
Ball bearing	PKX4A-71	1
Retaining ring	PKX4A-72	1
Armature, 230V	PKX4A-73	1
Ball bearing	PKX4A-74	1
Rubber sleeve	PKX4A-75	1
Crank shaft	PKX4A-76	1
Ball bearing	PKX4A-77	1
Gear wheel	PKX4A-78	1
Lens head screw 4x48	PKX4A-79	2
Baffle plate	PKX4A-80	1

Description	Order-No.	Quantity
Field, 230V	PKX4A-81	1
Motor housing	PKX4A-82	1
Electronics ass'y	PKX4A-85	1
Brush holder	PKX4A-86	2
Carbon brush	PKX4A-87	2
Lens head screw 3x10	PKX4A-88	4
Lens head screw 4x14	PKX4A-89	6
Motor cover	PKX4A-90	1
Capacitor	PKX4A-91	1
Potentiometer	PKX4A-92	1
Cable electronics	PKX4A-93	1
Spring	PKX4A-94	1
Switch protection cap	PKX4A-96	1
Switch	PKX4A-97	1
Switch handle	PKX4A-99	1
Lens head screw 4x20	PKX4A-102	2
Cord clamp	PKX4A-104	1
Cord sleeve	PKX4A-105	1
Cord and plug	PKX4A-106	1
Cheese head screwM4x10	PKX4A-107	2
Disk spring	PKX4A-108	2
Front cover	PKX4A-200	1
Clutch dog	PKX4A-201	1
Pressure spring	PKX4A-214	4
Washer	PKX4A-216	2
Countersunk head screw 4x12	PKX4A-218	1
Disk spring	PKX4A-219	1
O-ring seal 27x3	PKX4A-300	2
Sleeve bearing	PKX4A-301	1
Retainer	PKX4A-303	1
O-ring seal 38x5	PKX4A-304	2
Sleeve bearing	PKX4A-305	0
Bushing	PKX4A-306	1
O-ring seal 35x3	PKX4A-307	1
Cylinder	PKX4A-308	1
Striker	PKX4A-309	1
Striker ring	PKX4A-310	1
Piston ring	PKX4A-311	1
Piston	PKX4A-312	1
Piston, assembled	PKX4A-312k	0
Sleeve bearing 38x42x12	PKX4A-313	1
Hexagon head screw M8x150	PKX4A-314	1
D-handle	PKX4A-315	1
D-handle, assembled	PKX4A-315K	0
Spring dia.10mm	PKX4A-316	1
Washer	PKX4A-317	1
Star knob	PKX4A-318	1
Clamping collar	PKX4A-319	1
Change lever	PKX4A-320	1
Change lever, assembled	PKX4A-320k	0

Spare part list

PKX 4 A breaker




Description	Order-No.	Quantity
Lower vibration abs. housing (mot.)	PKX4A-400	1
Vibration abs.housing (mot.), ass'y	PKX4A-400k	0
Spacer	PKX4A-401	2
Upper vibration abs. housing (mot.)	PKX4A-402	1
Lower vibration abs. housing (cyl.)	PKX4A-403	1
Spacer	PKX4A-404	2
Antivibration mass	PKX4A-405	1
Spring plate	PKX4A-406	1
Disk spring	PKX4A-407	1
Upper vibration abs. housing (cyl.)	PKX4A-408	1
Lens head screw 5x64	PKX4A-409	2

Description	Order-No.	Quantity
Washer M5	PKX4A-410	4
Sticker RVA	PKX4A-411	1
Tool bit driver	PKX4A-412	1
Seal	PKX4A-413	1
DUSS PKX4A sticker	PKX4A-600	2
PKX4A nameplate	PKX4A-601	1
Pressure spring	PKX4A-602	4
Vibration abs.housing (cyl.), ass'y	PKX4A-602k	0
Ram	PKX4A-603	1

DUSS

PKX 4 A

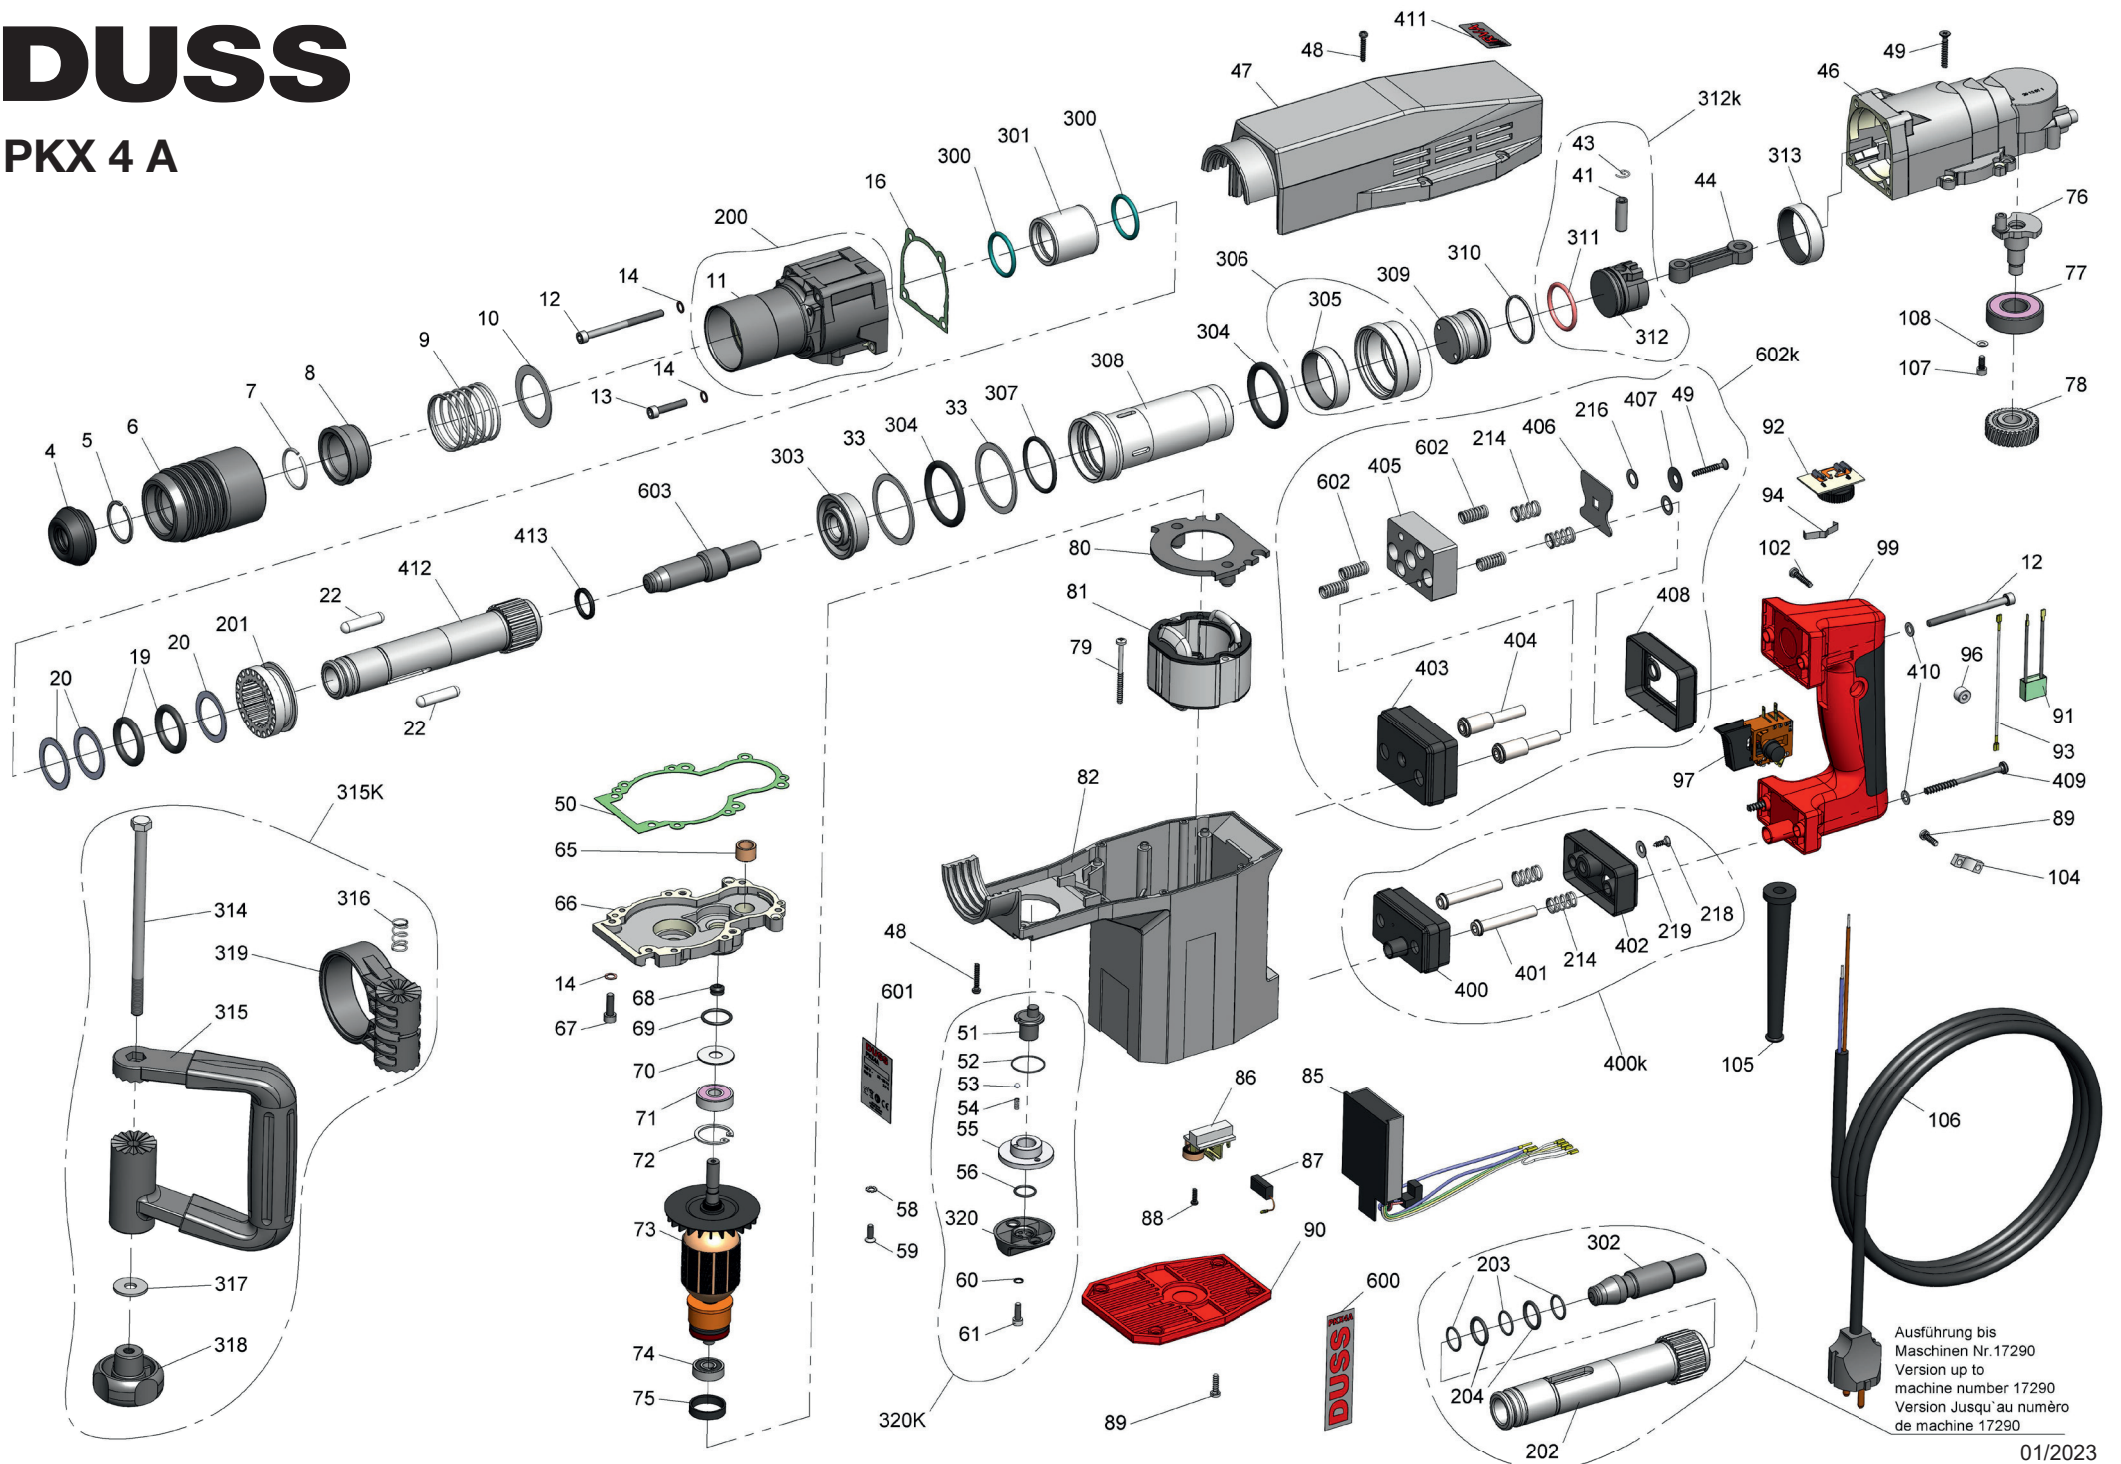

Ausführung bis
Maschinen Nr. 17290
Version up to
machine number 17290
Version Jusqu'au numéro
de machine 17290