

Spare part list

PKX 7 breaker

DUSS

Description	Order-No.	Quantity
Dust guard	PKX7-4	1
Circlip	PKX7-5	1
Locking sleeve	PKX7-6	1
Retaining ring	PKX7-7	1
Steel sleeve	PKX7-8	1
Spring	PKX7-9	1
Washer	PKX7-10	1
Cheese head screw M6x75	PKX7-11	4
Copper washer M6	PKX7-12	4
Countersunk head screw M5x8	PKX7-13	1
Spring	PKX7-14	1
Ball dia. 4mm	PKX7-15	1
Front cover	PKX7-16	1
Gasket	PKX7-17	1
O-ring seal 31x1,5	PKX7-19	2
Sleeve bearing	PKX7-20	1
Upper cover	PKX7-21	1
Bottom cover	PKX7-22	1
Lens head screw 3,5x30	PKX7-23	2
Lens head screw M4x12	PKX7-24	4
Clutch dog	PKX7-25	1
Damper ring	PKX7-26	1
Roller	PKX7-27	2
Tool bit driver	PKX7-28	1
Sealing ring	PKX7-29	1
Sleeve bearing	PKX7-38	1
O-ring seal 49x3,5	PKX7-39	1
Piston pin	PKX7-48	1
Spring lock washer	PKX7-49	2
Cheese head screw M5x20	PKX7-54	6
Copper washer M5	PKX7-55	6
Gasket	PKX7-56	1
Sleeve bearing	PKX7-60	1
Crank shaft	PKX7-64	1
Ball bearing	PKX7-65	1
Gear wheel	PKX7-66	1
Ventilation insert, right	PKX7-67	1
Ventilation insert, left	PKX7-68	1
Motor housing	PKX7-69	1
Lower vibration abs. housing (cyl.)	PKX7-70	1
Spacer	PKX7-71	0
Pressure spring	PKX7-74	0
Space hull	PKX7-75	0
Spring plate	PKX7-76	1
Disk spring	PKX7-77	1
Washer	PKX7-78	2
Screw 4x27	PKX7-79	1
Upper vibration abs. housing (cyl.)	PKX7-80	1
Pressure spring	PKX7-81	2
Washer M5	PKX7-82	4

Description	Order-No.	Quantity
Cheese head screw M5x65	PKX7-83	2
Lower vibration abs. housing (mot.)	PKX7-84	1
Spacer	PKX7-85	2
Pressure spring	PKX7-86	2
Upper vibration abs.housing (mot.)	PKX7-87	1
Vibration abs.housing (mot.), ass'y	PKX7-87k	0
Disk spring	PKX7-88	1
Countersunk head screw 4x12	PKX7-89	1
Side handle	PKX7-90	1
Switch handle	PKX7-91	1
Nut M12	PKX7-92	1
Potentiometer	PKX7-93	1
Spring	PKX7-94	1
Lens head screw 4x20	PKX7-95	3
Lens head screw 4x14	PKX7-96	2
Cord clamp	PKX7-97	1
Cheese head screw M5x60	PKX7-98	2
Fitting for the diodes	PKX7-99	1
Switch	PKX7-100	1
Cord sleeve	PKX7-101	1
Cord and plug	PKX7-102	1
Carbon brush	PKX7-105	1
Carbon brush with wire strand	PKX7-106	1
Brush holder	PKX7-107	2
Lens head screw 3x10	PKX7-108	4
Grooved pin	PKX7-110	4
Roller 5x13,8	PKX7-111	1
Shaft	PKX7-112	1
O-ring seal 15x1,5	PKX7-113	1
Lock washer M4	PKX7-115	2
Cheese head screw M4x12	PKX7-116	2
V-ring seal	PKX7-117	1
O-ring seal 26x2	PKX7-118	1
Plain washer	PKX7-119	1
Ball bearing	PKX7-120	1
Retaining ring	PKX7-121	1
Washer	PKX7-122	1
Ball bearing	PKX7-124	1
Rubber sleeve	PKX7-125	1
Lens head screw 4x48	PKX7-126	2
Insulating housing	PKX7-128	1
Motor cover	PKX7-129	1
Lens head screw M4x20	PKX7-130	4
Insulating sleeve	PKX7-131	1
Sticker RVA	PKX7-132	1
O-ring seal 8x3	PKX7-133	1
Spacer with guidance	PKX7-134	2
Pressure spring	PKX7-135	2
Sealing ring	PKX7-301	2
Ram	PKX7-302	1

Spare part list

PKX 7 breaker


DUSS

Description	Order-No.	Quantity
Retainer	PKX7-303	1
Disk spring	PKX7-304	2
Damper	PKX7-305	1
O-ring seal 35x3	PKX7-306	1
Cylinder	PKX7-307	1
Damper washer	PKX7-308	1
O-ring seal 45x4,5	PKX7-309	1
Striker	PKX7-310	1
Striker ring	PKX7-311	1
Piston ring	PKX7-312	1
Piston	PKX7-313	1
Piston, assembled	PKX7-313k	0
Connecting rod	PKX7-314	1
Sleeve bearing	PKX7-315	1
Gasket	PKX7-316	1
Pressure spring	PKX7-317	8
Antivibration mass	PKX7-318	1

Description	Order-No.	Quantity
Vibration abs.housing (cyl.), ass'y	PKX7-319k	0
DUSS PKX7 sticker	PKX7-320	2
Electronics ass'y	PKX7-321	1
PKX7 nameplate	PKX7-322	1
Change lever	PKX7-323	1
Change lever, assembled	PKX7-323k	0
Armature, 230V	PKX7-324	1
Field, 230V	PKX7-325	1
Clamping collar	PKX7-326	1
D-handle	PKX7-327	1
D-handle, assembled	PKX7-327k	0
Spring dia.10mm	PKX7-328	1
Washer	PKX7-329	1
Star knob	PKX7-330	1
Hexagon head screw M8x150	PKX7-331	1

DUSS

PKX 7

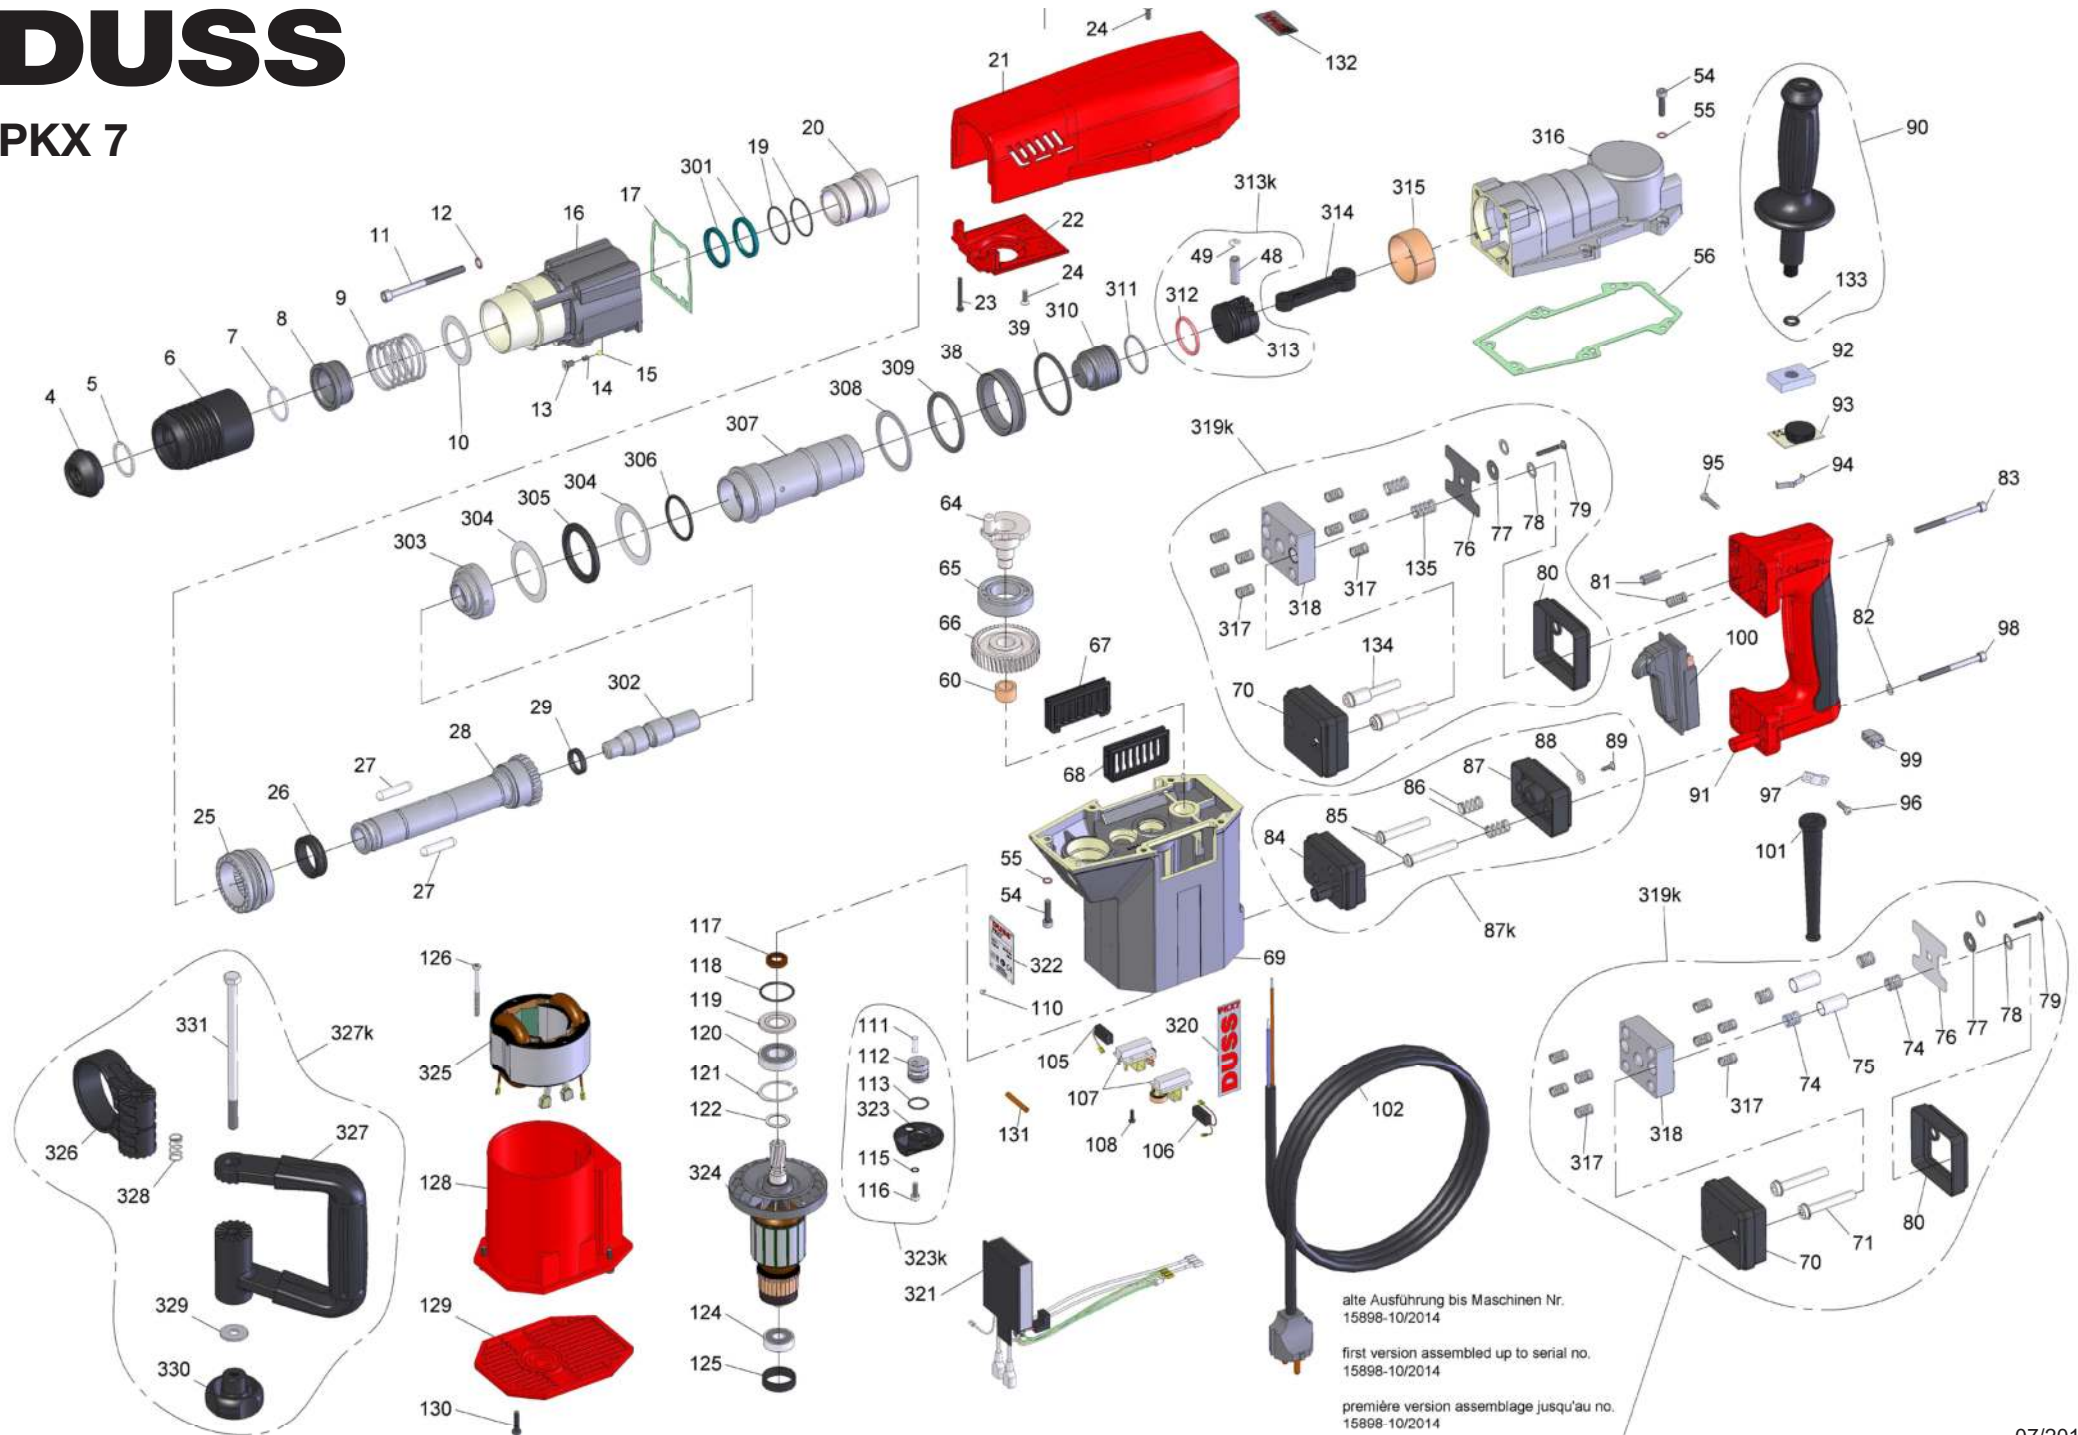

alte Ausführung bis Maschinen Nr.
15898-10/2014

first version assembled up to serial no.
15898-10/2014

première version assemblage jusqu'au no.
15898-10/2014