

Spare part list

PX 96 combi hammer

DUSS

Description	Order-No.	Quantity	Description	Order-No.	Quantity
Side handle	PX96-1	1	O-ring seal 20x1	PX96-49	1
Clamping collar with jaw	PX96-2	1	Ball dia. 3,5mm	PX96-50	1
Nut M12	PX96-3	1	Spring	PX96-51	1
Dust guard	PX96-4	1	Flange	PX96-52	1
Circlip	PX96-5	1	Serrated washer	PX96-53	2
Locking sleeve	PX96-6	1	Raised countersunk screw M4x10	PX96-54	2
Retaining ring	PX96-7	1	O-ring seal 13x1,5	PX96-55	1
Steel sleeve	PX96-8	1	Change lever	PX96-56	1
Spring	PX96-9	1	Change lever, assembled	PX96-56K	0
Washer	PX96-10	1	Lock washer M4	PX96-57	2
Aluminium sleeve	PX96-11	1	Cheese head screw M4x12	PX96-58	2
Cheese head screw M6x100	PX96-12	4	Lens head screw 4x62	PX96-59	2
Copper washer M6	PX96-13	4	Field, 230V	PX96-60	1
Front cover	PX96-14	1	Insulating housing	PX96-61	1
Gasket	PX96-15	1	Disk spring	PX96-62	2
Sealing ring	PX96-16	2	Cheese head screw M5x180	PX96-63	4
Sleeve bearing	PX96-17	1	Electronics ass'y	PX96-64	1
Clutch dog	PX96-18	1	Motor cover	PX96-65	1
O-ring seal 26x5	PX96-19	1	Lens head screw 4x14	PX96-66	6
Roller	PX96-20	2	Carbon brush	PX96-67	2
Tool bit driver	PX96-21	1	Brush holder	PX96-68	2
O-ring seal 16x2,5	PX96-22	2	Lens head screw 3x10	PX96-69	4
O-ring seal 15x1,5	PX96-22A	3	V-ring seal	PX96-70	1
Ram	PX96-23	1	O-ring seal 30x2	PX96-71	1
O-ring seal 23x5	PX96-24	2	Plain washer	PX96-72	1
Damper ring	PX96-25	1	Ball bearing	PX96-73	1
O-ring seal 16x8	PX96-26	1	Rubber sleeve	PX96-74	1
Damper washer	PX96-27	1	Bearing sleeve	PX96-75	1
Stop halves	PX96-28	2	Copper washer M4	PX96-76	2
Safety clutch	PX96-29	1	Cheese head screw M4x22	PX96-77	2
Friction sleeve	PX96-30	1	Washer	PX96-78	1
Clutch spring	PX96-31	1	Armature, 230V	PX96-79	1
Pin	PX96-32	1	Ball bearing	PX96-80	1
Roller 3x15,8	PX96-33	4	Rubber sleeve	PX96-81	1
Cylinder	PX96-34	1	Sleeve bearing	PX96-82	1
Feather key	PX96-35	1	Cylinder housing	PX96-83	1
Support washer	PX96-36	1	Bevel gear pinion	PX96-84	1
Damper	PX96-37	1	Gear wheel	PX96-85	2
Sleeve bearing	PX96-38	1	Ball bearing	PX96-86	1
Bevel gear	PX96-39	1	Sleeve bearing	PX96-87	2
Circlip	PX96-40	1	Ball bearing	PX96-88	2
Striker	PX96-41	1	Pinion	PX96-89	1
Striker ring	PX96-42	1	Crank shaft	PX96-90	1
Piston ring	PX96-43	1	Ball bearing	PX96-91	1
Piston pin	PX96-44	1	Gear wheel	PX96-92	1
Piston	PX96-45	1	Motor housing	PX96-94	1
Piston, assembled	PX96-45k	0	Cylinder housing gasket	PX96-93	1
Spring lock washer	PX96-46	2	Copper washer M5	PX96-95	4
Connecting rod	PX96-47	1	Cheese head screw M5x25	PX96-96	2
Shaft	PX96-48	1	Cheese head screw M5x12	PX96-97	2

Spare part list

PX 96 combi hammer

DUSS

Description	Order-No.	Quantity
PX96 nameplate	PX96-98	1
Grooved pin	PX96-99	4
DUSS PX96 sticker	PX96-100	2
Damper motor housing	PX96-101	2
Damper cylinder housing	PX96-102	1
Switch handle	PX96-103	1
Potentiometer	PX96-104	1
Spring	PX96-105	1
Cheese head screw M5x30	PX96-106	4
Spacer	PX96-107	4

Description	Order-No.	Quantity
Lens head screw 4x20	PX96-108	2
Cord sleeve	PX96-109	1
Switch	PX96-110	1
Capacitor	PX96-111	1
Foam rubber	PX96-112	1
Cord clamp	PX96-113	1
Cord and plug	PX96-114	1
O-ring seal 14x4	PX96-115	1

DUSS

PX 96

