

# Spare part list

## PX 48 A combi hammer

# DUSS

Description	Order-No.	Quantity
Side handle	PX48A-1	1
Clamping collar with jaw	PX48A-2	1
Nut M12	PX48A-3	1
Dust guard	PX48A-4	1
Circlip	PX48A-5	1
Locking sleeve	PX48A-6	1
Retaining ring	PX48A-7	1
Steel sleeve	PX48A-8	1
Spring	PX48A-9	1
Washer	PX48A-10	1
Aluminium sleeve	PX48A-11	1
Cheese head screw M5x65	PX48A-12	4
Cheese head screw M5x25	PX48A-13	2
Copper washer M5	PX48A-14	10
Gasket	PX48A-16	1
Sealing ring	PX48A-17	2
Sleeve bearing	PX48A-18	1
O-ring seal 26x5	PX48A-19	1
Damper washer	PX48A-20	2
Roller	PX48A-22	2
Ram guide	PX48A-26	1
O-ring seal 16x6	PX48A-27	1
Clutch spring	PX48A-31	1
Retaining ring	PX48A-32	1
Washer	PX48A-33	1
O-ring seal 47x3	PX48A-33a	1
Sleeve bearing	PX48A-34	1
O-ring seal 29,2x3	PX48A-35	1
Pin	PX48A-36	1
Roller 3x11,8	PX48A-37	4
Cylinder	PX48A-38	1
Striker	PX48A-39	1
Piston ring	PX48A-40	1
Piston ring	PX48A-40p	1
Piston pin	PX48A-41	1
Piston	PX48A-42	1
Piston, assembled	PX48A-42k	0
Spring lock washer	PX48A-43	2
Connecting rod	PX48A-44	1
Needle bush	PX48A-45	1
Cylinder housing	PX48A-46	1
Upper cover	PX48A-47	1
Lens head screw 3,5x20	PX48A-48	6
Screw 4x27	PX48A-49	7
Gasket	PX48A-50	1
Shaft	PX48A-51	1
O-ring seal 20x1	PX48A-52	1
Ball dia. 3,5mm	PX48A-53	1
Spring	PX48A-54	1
Flange	PX48A-55	1

Description	Order-No.	Quantity
O-ring seal 13x1,5	PX48A-56	1
Change lever	PX48A-57	1
Change lever, assembled	PX48A-57K	0
Serrated washer	PX48A-58	2
Raised countersunk screw M4x10	PX48A-59	2
Lock washer M4	PX48A-60	2
Cheese head screw M4x12	PX48A-61	2
Bevel gear pinion	PX48A-62	1
Gear wheel	PX48A-63	1
Ball bearing	PX48A-64	1
Sleeve bearing	PX48A-65	2
Gear plate	PX48A-66	1
Cheese head screw M5x16	PX48A-67	6
V-ring seal	PX48A-68	1
O-ring seal 18x2	PX48A-69	1
Plain washer	PX48A-70	1
Ball bearing	PX48A-71	1
Retaining ring	PX48A-72	1
Ball bearing	PX48A-74	1
Rubber sleeve	PX48A-75	1
Crank shaft	PX48A-76	1
Ball bearing	PX48A-77	1
Gear wheel	PX48A-78	1
Lens head screw 4x48	PX48A-79	2
Baffle plate	PX48A-80	1
Motor housing	PX48A-82	1
Brush holder	PX48A-86	2
Carbon brush	PX48A-87	2
Lens head screw 3x10	PX48A-88	4
Lens head screw 4x14	PX48A-89	6
Motor cover	PX48A-90	1
Capacitor	PX48A-91	1
Potentiometer	PX48A-92	1
Cable electronics	PX48A-93	1
Spring	PX48A-94	1
Switch protection cap	PX48A-96	1
Switch	PX48A-97	1
Switch handle	PX48A-99	1
Lens head screw 4x20	PX48A-102	2
Cord clamp	PX48A-104	1
Cord sleeve	PX48A-105	1
Cord and plug	PX48A-106	1
Cheese head screw M4x10	PX48A-107	2
Disk spring	PX48A-108	2
Front cover	PX48A-200	1
Clutch dog	PX48A-201	1
Safety clutch	PX48A-206	1
Armature, 230V	PX48A-207	1
Field, 230V	PX48A-210	1
Electronics ass'y	PX48A-213	1

# Spare part list

## PX 48 A combi hammer

# DUSS

Description	Order-No.	Quantity
Pressure spring	PX48A-214	4
Washer	PX48A-216	2
Countersunk head screw 4x12	PX48A-218	1
Disk spring	PX48A-219	1
Lower vibration abs. housing (mot.)	PX48A-400	1
Vibration abs.housing (mot.), ass'y	PX48A-400k	0
Spacer	PX48A-401	2
Upper vibration abs. housing (mot.)	PX48A-402	1
Lower vibration abs. housing (cyl.)	PX48A-403	1
Spacer	PX48A-404	2
Antivibration mass	PX48A-405	1
Spring plate	PX48A-406	1
Disk spring	PX48A-407	1

Description	Order-No.	Quantity
Upper vibration abs. housing (cyl.)	PX48A-408	1
Lens head screw 5x64	PX48A-409	2
Washer M5	PX48A-410	4
Sticker RVA	PX48A-411	1
Tool bit driver	PX48A-412	1
Seal	PX48A-413	1
DUSS PX48A sticker	PX48A-500	2
PX48A nameplate	PX48A-501	1
Pressure spring	PX48A-502	4
Vibration abs.housing (cyl.), ass'y	PX48A-502k	0
Ram	PX48A-503	1