

# Spare part list

## PX 76 combi hammer

# DUSS

Description	Order-No.	Quantity
Side handle	PX76-1	1
Clamping collar with jaw	PX76-2	1
Nut M12	PX76-3	1
Dust guard	PX76-4	1
Circlip	PX76-5	1
Locking sleeve	PX76-6	1
Retaining ring	PX76-7	1
Steel sleeve	PX76-8	1
Spring	PX76-9	1
Washer	PX76-10	1
Aluminium sleeve	PX76-11	1
Cheese head screw M6x90	PX76-12	4
Copper washer M6	PX76-13	4
Front cover	PX76-14	1
Gasket	PX76-15	1
Sealing ring	PX76-16	2
Sleeve bearing	PX76-17	1
Needle bush	PX76-18	1
Cylinder housing	PX76-19	1
Gasket	PX76-20	1
Cheese head screw M5x20	PX76-21	6
Copper washer M5	PX76-22	6
Clutch dog	PX76-23	1
O-ring seal 26x5	PX76-24	1
Roller	PX76-25	2
Tool bit driver	PX76-26	1
O-ring seal 16x2,5	PX76-27	2
Ram	PX76-28	1
Damper ring	PX76-29	1
O-ring seal 16x8	PX76-30	1
Damper washer	PX76-31	1
Stop halves	PX76-32	2
Safety clutch	PX76-33	1
O-ring seal 29,2x3	PX76-34	1
Clutch spring	PX76-35	1
Retaining ring	PX76-36	1
Damper washer	PX76-37	1
Sleeve bearing	PX76-38	1
O-ring seal 49x3,5	PX76-38A	1
Pin	PX76-39	1
Roller 3x11,8	PX76-40	4
Cylinder	PX76-41	1
Striker	PX76-42	1
Piston ring	PX76-43	2
Piston pin	PX76-44	1
Piston	PX76-45	1
Piston, assembled	PX76-45k	0
Spring lock washer	PX76-46	2
Connecting rod	PX76-47	1
Shaft	PX76-48	1

Description	Order-No.	Quantity
O-ring seal 20x1	PX76-49	1
Ball dia. 3,5mm	PX76-50	1
Spring	PX76-51	1
Serrated washer	PX76-52	2
Flange	PX76-53	1
Raised countersunk screw M4x10	PX76-54	2
O-ring seal 13x1,5	PX76-55	1
Change lever	PX76-56	1
Change lever, assembled	PX76-56K	0
Lock washer M4	PX76-57	2
Cheese head screw M4x12	PX76-58	2
Carbon brush	PX76-59	2
Brush holder	PX76-60	2
Lens head screw 3x10	PX76-61	4
Lens head screw M4x20	PX76-62	4
Lens head screw 4x48	PX76-63	2
Field, 230V	PX76-64	1
Insulating housing	PX76-65	1
Motor cover	PX76-66	1
Electronics ass'y	PX76-67	1
V-ring seal	PX76-68	1
O-ring seal 26x2	PX76-69	1
Plain washer	PX76-70	1
Ball bearing	PX76-71	1
Retaining ring	PX76-72	1
Washer	PX76-73	1
Armature, 230V	PX76-74	1
Ball bearing	PX76-75	1
Rubber sleeve	PX76-76	1
Grooved pin	PX76-77	4
PX76 nameplate	PX76-78	1
DUSS PX76 sticker	PX76-79	2
Motor housing	PX76-80	1
Bevel gear pinion	PX76-81	1
Gear wheel	PX76-82	1
Ball bearing	PX76-83	1
Sleeve bearing	PX76-84	2
Needle bush	PX76-85	1
Layshaft gear	PX76-86	1
Pinion	PX76-87	1
Ball bearing	PX76-88	1
Crank shaft	PX76-89	1
Ball bearing	PX76-90	1
Gear wheel	PX76-91	1
Damper cylinder housing	PX76-92	1
Switch	PX76-93	1
Damper motor housing	PX76-94	1
Foam rubber	PX76-95	1
Capacitor	PX76-96	1
Switch handle	PX76-97	1

# Spare part list

## PX 76 combi hammer

# DUSS

Description	Order-No.	Quantity
Potentiometer	PX76-98	1
Spring	PX76-99	1
Lens head screw 4x20	PX76-100	2
Cheese head screw M5x25	PX76-101	4
Spacer	PX76-102	4
Cord sleeve	PX76-103	1
Cord clamp	PX76-104	1
Lens head screw 4x14	PX76-105	2

Description	Order-No.	Quantity
Cord and plug	PX76-106	1
O-ring seal 14x4	PX76-107	1
Ventilation insert, right	PX76-200	0
Ventilation insert, left	PX76-201	0
Washer M5	PX76-202	2

# DUSS

## PX 76

