

# Spare part list

## SB 13/2 RLE 2-speed impact drill

# DUSS

Description	Order-No.	Quantity
Hexagon nut M5	B13-1	1
Star knob	B13-2	1
Clamping collar	B13-3	1
Side handle	B13-4	1
Clamping collar, assembled	B13-4K	0
Nut M10	B13-5	1
Depth stop	B13-6	1
Cap	B13-7	1
Retaining screw	B13-8	1
Retaining ring	B13-10	1
Washer	B13-11	1
Ball bearing	B13-12	1
Lens head screw 4x35	B13-14	2
O-ring seal 10x1,5	B13-15	1
Gearshift lever	B13-16	1
Ball dia. 4mm	B13-17	2
Spring	B13-18	2
Countersunk head screw M5x8	B13-19	2
Lens head screw 4x62	B13-21	2
Gasket	B13-22	1
Sliding gear wheel	B13-23	1
Ball bearing	B13-24	1
Sliding pinion	B13-25	1
O-ring seal 8x2	B13-26	1
Ball bearing	B13-27	1
Needle bearing	B13-28	3
Second shaft	B13-29	1
Pinion	B13-30	1
Ball bearing	B13-31	1
Gear cover	B13-32	1
Ball bearing	B13-33	1
Washer	B13-34	1
Armature, 230V	B13-35	1
Ball bearing	B13-36	1
RFJ choke, blue	B13-37	1
RFJ choke, black	B13-38	1
Capacitor	B13-39	1
Cord sleeve	B13-40	1
Lens head screw 4x14	B13-41	6
Cord clamp	B13-42	1
Cord and plug	B13-43	1
Baffle plate	B13-44	1
Field, 230V	B13-45	1
Lens head screw 4x48	B13-46	4
Switch	B13-48	1
Motor housing	B13-49	1
Carbon brush	B13-50	2
Brush holder	B13-51	1
DUSS sticker	B13-52	2
Reverser	B13-53	0

Description	Order-No.	Quantity
Sticker R-L	B13-54	1
Quick drill chuck	B13-55	1
Drill shaft	B13-201	1
O-ring seal 12x1,5	B13-202	1
Ratchet flange	B13-203	1
Sealing ring	B13-204	1
Ratchet plate	B13-205	1
Front cover	B13-206	1
Change lever	B13-207	1
O-ring seal 5x1,5	B13-208	1
Countersunk head screw M4x8	B13-209	4
Stop ring	B13-210	1
Washer	B13-211	3
Needle bearing	B13-212	1
Retaining ring	B13-213	1
Spring	B13-214	1
SB13/2RLE nameplate	B13-215	1

# DUSS

## SB 13/2 RLE

